

**selec****RPS240-24-CU**  
Operating Instruction**FEATURES**

- AC 100-240V Wide-range Input.
- Active PFC
- Cost optimized without compromising quality or reliability.
- Full power between -25°C and +50°C.
- DC-OK Relay contact.
- Compact size.
- UL-508 approved.

**INTENDED USE**

This device is designed for installation in an enclosure and is intended for the general professional use such as in instrumentation equipment, office, industrial control and communication.

Do not use this power supply in equipment where malfunction may cause severe personal injury or threaten human life.

**INPUT SPECIFICATIONS**

|                      |                                                                                 |
|----------------------|---------------------------------------------------------------------------------|
| INPUT VOLTAGE RANGE  | 100 - 240VAC $\pm 10\%$ ; 127 - 370VDC<br>(Refer datasheet for input de-rating) |
| FREQUENCY RANGE      | 50-60Hz                                                                         |
| EFFICIENCY(TYP.)     | 93% @ 230VAC                                                                    |
| AC CURRENT(TYP.)     | 2.4A @ 115VAC; 1.2A @ 230VAC                                                    |
| INRUSH CURRENT(TYP.) | <60Amps; Measured at 264VAC,<br>25°C Ambient, Cold Start                        |
| POWER FACTOR         | >0.95 @ Full Load Over entire input range                                       |

**OUTPUT SPECIFICATIONS**

|                          |                                                                               |
|--------------------------|-------------------------------------------------------------------------------|
| OUTPUT VOLTAGE           | 24 - 28VDC                                                                    |
| OUTPUT CURRENT           | 10A at 24V; 8.6A at 28V                                                       |
| RIPPLE AND NOISE         | <1% of Vout ★                                                                 |
| LINE AND LOAD REGULATION | $\pm 1\%$                                                                     |
| START UP TIME            | <2 Sec @ Full Load Over entire input range                                    |
| HOLD UP TIME             | $\geq 25\text{ms}$ at 24V & $\geq 16\text{ms}$ at 28V @ 115/230VAC, Full Load |
| DC-OK CONTACT            | 30VDC 1A; 60VDC 0.5A; 125VAC 0.5A,<br>resistive load; min. current 1mA        |
| SERIES OPERATION         | Possible for up to two power supplies<br>(with external diode)                |

★ Ripple & Noise measured at 20 MHz of bandwidth by using 0.1uf & 10uf parallel capacitor.

**PROTECTIONS**

|                      |                                                                                                                                                                     |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| INPUT FUSE           | 4A - 250VAC Internal                                                                                                                                                |
| OUTPUT OVER LOAD     | 110% to 140% of rated output current<br>Protection type : Hiccup mode; recovers<br>automatically after fault condition is removed.                                  |
| OUTPUT SHORT CIRCUIT | Hiccup mode when output is shorted; Recovers<br>automatically after fault condition is removed.                                                                     |
| OUTPUT OVER VOLTAGE  | 31VDC $\pm 0.5\text{VDC}$<br>Protection type : Latched; Input AC power<br>has to be recycled to recover the power supply.                                           |
| OVER TEMPERATURE     | Power supply shuts down when the temperature of PCB<br>below PFC choke reaches typically 120°C; Recovers<br>automatically when temperature falls to typically 90°C. |

**ENVIRONMENT**



|                       |                                                                       |
|-----------------------|-----------------------------------------------------------------------|
| OPERATING TEMPERATURE | -25°C to +70°C<br>*De-rate output power at 6W/°C above +50°C Ambient. |
| STORAGE TEMPERATURE   | -40°C to +85°C.                                                       |
| HUMIDITY              | 5 to 95% RH, Non Condensing                                           |
| ALTITUDE              | 2000m                                                                 |

**SAFETY & EMC**

|                              |                                                                                                   |
|------------------------------|---------------------------------------------------------------------------------------------------|
| SAFETY STANDARDS             | UL-508 approved (File number : E522848)<br>Designed to meet IEC 62368-1                           |
| DIELECTRIC WITHSTAND VOLTAGE | I/P to Earth : 2500VAC<br>I/P to O/P : 4000VAC<br>O/P to Earth : 1500VAC<br>O/P to DC-OK : 500VAC |
| INSULATION RESISTANCE        | 100 M $\Omega$ min. (between all outputs and all inputs/<br>PE terminals) at 500 VDC              |
| CONDUCTED EMISSION           | EN55022 ; Class B                                                                                 |
| RADIATED EMISSION            | EN55022 ; Class A                                                                                 |
| CURRENT HARMONICS            | Class D                                                                                           |
| EMS IMMUNITY                 | Compliance to IEC61000-4-4,5,11                                                                   |

**DIMENSIONAL DIAGRAM**

|           |                      |
|-----------|----------------------|
| DIMENSION | 50*136*135mm (W*H*D) |
| WEIGHT    | 645 gms              |

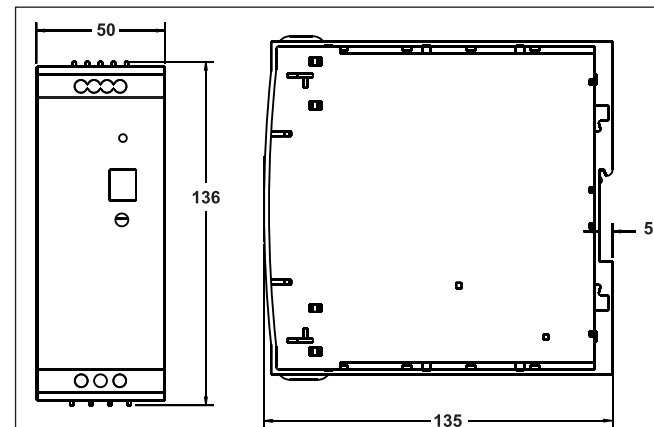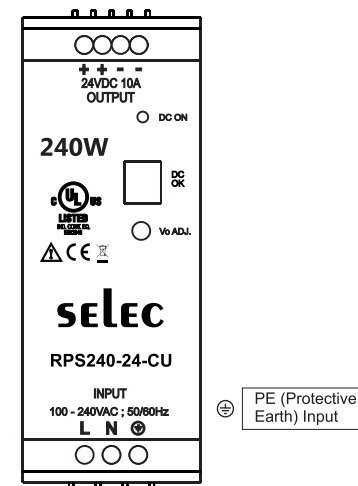**WIRING DIAGRAM****WIRING INSTRUCTIONS**

1. To prevent risk of electric shock, power supply equipment must be kept OFF while wiring.
2. Terminals and electrically charged parts must not be touched when the power is ON.
3. Wiring shall be done strictly according to terminal layout provided in the operating manual.

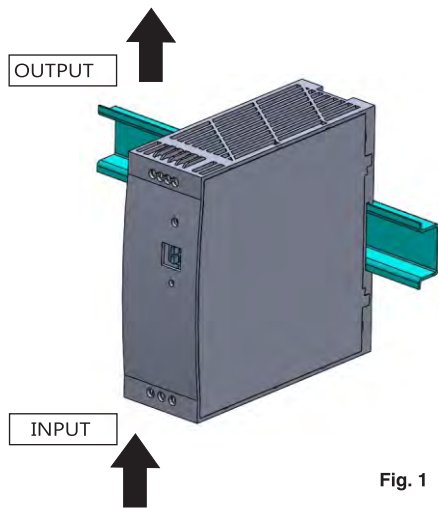


Fig. 1

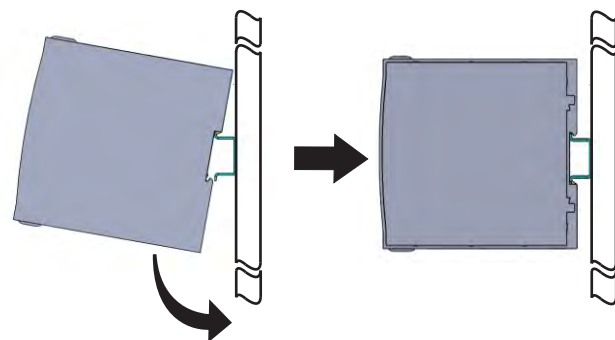


Fig. 2

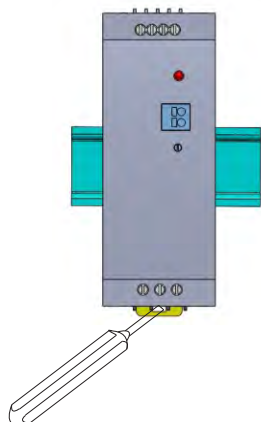


Fig. 3

## INSTALLATION INSTRUCTIONS (POLLUTION DEGREE 2)

### Attention:(Fig. 1)

1. Do not block the ventilation holes of power supply.
2. Keep at least 20mm clearance around the switching power supply.
3. The Equipment should not be installed in environmental conditions other than those specified in this manual.

### Mounting:(Fig.2)

1. Slightly tilt the unit to engage on the top side of Din Rail mounting.
2. Press it downward until it gets locked in Din Rail.

### Removal:(Fig.3)

1. Before removing power supply unit from Din Rail ensure that supply has been switched off.
2. Unscrew all the wire connections of power supply unit.
3. Insert a screw driver into the mounting clamp slot & pull it down to remove the power supply from Din Rail.

**⚠ WARNING :** Risk of electrical shock, fire, personal injury or death.

1. Do not use the power supply without proper grounding (Protective Earth).
2. Do not use in wet locations or in areas where moisture or condensation can be expected.
3. Make sure mains power supply is off before wiring the power supply unit. Make sure of correct wiring. Incorrect wiring may cause electrical shock or damage.
4. Do not touch the power supply during operation or immediately after turning off because some parts get hot or are at high voltage which may cause burns or electrical shock.
5. Do not install the power supply where human body may come into contact while power is supplied to the power supply.
6. Do not repair the power supply at user end . Modification or repairing of the power supply by users may cause electrical shocks, damage, & other accidents.
7. If damage or malfunction occurs during operation, immediately turn off mains power.

## MEANING OF PRODUCT SAFETY SYMBOL



Minor electric shock, fire or product failure may occasionally occur. Do not allow any pieces of metal or conductors or any clippings or cuttings resulting from installation work to enter the product.

Un choc électrique mineur, un incendie ou une défaillance du produit peuvent survenir occasionnellement. Ne laissez pas de morceaux de métal ou de conducteurs ou de coupures ou de coupures résultant des travaux d'installation pénétrer dans le produit.



WEEE symbol for Electrical and Electronic Equipment waste management

Symbole DEEE pour la gestion des déchets d'équipements électriques et électroniques

## SAFETY INSTRUCTIONS

- This manual is meant for personnel involved in wiring installation operation & routine maintenance of the equipment.
- Disconnect power supply of your system before starting any installation operation or wiring.
- Improper installation operation or wiring may impair safety & failure of the unit or electrical shock or damage.
- Connect the ground completely. A protective earthing terminal stipulated in safety standards is used. Electric shock or malfunction may occur if ground is not connected properly.

## SR.NO. / DATE CODE IDENTIFICATION

### Format :- YYMMMLPP - XXXX

|      |                        |
|------|------------------------|
| YY   | Year of Manufacturing  |
| MM   | Month of Manufacturing |
| L    | Manufacturing Location |
| PP   | Plan Month             |
| XXXX | Serial number of unit  |

## ? SERVICE DETAILS

This power supply is not field serviceable product. In case of failure or malfunction, send back the power supply to factory.

Please contact service center for repair on the following numbers:

**Tel. No. : +91-7498077172;**

**Email : service@selec.com**

**NO WARRANTY ON UNIT DAMAGED DUE TO WRONG CONNECTION OF POWER SUPPLY.**

(Specifications are subject to change, since development is a continuous process.)

### Factory Address :

**EL-27/1, Electronic Zone, TTC Industrial Area,  
MIDC, Mahape, Navi Mumbai - 400 710, INDIA.**

**Tel. No. : +91-22-28476443 / 1882**

**Fax No. : +91-22-28471733 | Toll free : 1800 227 353**

**Website: www.selec.com | Email: sales@selec.com**