



## FEATURES

- 5 x 3 x 1.16 Inches Form Factor.
- 350 Watts With Forced Air Cooling & 200 Watts Convection Cooling.
- No Load Power < 0.5 W.
- Remote Inhibit Available.
- Medical ( BF ) Safety Approvals.
- Approved to Household, ITAV and Medical Standards.
- Dual Fusing.

## INTENDED USE

This device is designed for the general professional use such as in instrumentation equipment, office, industrial control and communication as well as for medical equipments.

Do not use this power supply in equipment where malfunction may cause severe personal injury or threaten human life.

INPUT SPECIFICATIONS	
INPUT VOLTAGE RANGE	100 - 240 VAC $\pm 10\%$ ( Refer datasheet for input de-rating )
FREQUENCY RANGE	47 - 63 Hz
EFFICIENCY ( TYP. )	93 % @ 230 VAC
AC CURRENT ( TYP. )	3.6 A @ 115 VAC; 1.8 A @ 230 VAC
INRUSH CURRENT ( TYP. )	< 60 Amps; Measured at 264 VAC, 25°C Ambient, Cold Start
POWER FACTOR	> 0.95 @ Full Load Over entire input range

OUTPUT SPECIFICATIONS	
OUTPUT VOLTAGE	24 - 26 VDC
OUTPUT CURRENT	Convection: 8.34 A Forced air ( 13 CFM ): 14.59 A
RIPLER AND NOISE	< 1 % of Vout*
LINE AND LOAD REGULATION	< $\pm$ 1 %
START UP TIME	< 2 sec @ Full load over entire input range
HOLD UP TIME	> 20 msec at convection load & > 10 msec at full load for nominal Vout

\* Ripple & Noise measured at 20 MHz of bandwidth by using 0.1  $\mu$ F & 10  $\mu$ F parallel capacitor.

PROTECTIONS	
OUTPUT OVER LOAD	110 % to 140 % of rated output current Protection type: Hiccup mode; recovers automatically after fault condition is removed.
OUTPUT SHORT CIRCUIT	Hiccup mode when output is shorted; Recovers automatically after fault condition is removed.
OUTPUT OVER VOLTAGE	29 VDC $\pm$ 1 VDC Protection type: Latched; Input AC power has to be recycled to recover the power supply.
OVER TEMPERATURE	Power supply shuts down when the temperature of PCB below Transformer reaches typically 120°C, Turns ON only after the temperature falls to below 90°C typically and AC power is recycled there after.

ENVIRONMENT	
OPERATING TEMPERATURE	- 40°C to + 70°C ( Refer datasheet for Temperature de-rating )
STORAGE TEMPERATURE	- 40°C to + 85°C
HUMIDITY	5 to 95 % RH, Non Condensing
ALTITUDE	2000 m

<b>SAFETY &amp; EMC</b>	
<b>SAFETY STANDARDS</b>	Approved to IEC / EN / UL 62368-1; IEC / EN 60601-1; IEC / EN 61558
<b>DIELECTRIC WITHSTAND VOLTAGE</b>	I/P to Earth : 1500 VAC I/P to O/P : 4000 VAC O/P to Earth : 1500 VAC
<b>INSULATION RESISTANCE</b>	100 MΩ min. ( Between all outputs and all inputs at PE terminals ) at 500 VDC
<b>CONDUCTED EMISSION</b>	CISPR32; Class B
<b>RADIATED EMISSION</b>	CISPR32; Class A
<b>CURRENT HARMONICS</b>	Class D
<b>FMS IMMUNITY</b>	Compliance to IEC 61000-4-4. 5. 11

## MECHANICAL

The diagram illustrates the mechanical outline of a component. It features a central rectangular area with a height of 2.00 [50.80] mm. Above this, a header section is shown with a width of 1.50 [30.10] mm and a height of 0.20 [5.08] mm. The header is labeled 'RECOMMENDED FAN SIZE 40 x 40 x 20 MM' and has a 'DIRECTION OF AIRFLOW' arrow pointing downwards. On the right side, there are two mounting holes with a diameter of 0.157 [4.00] mm each, located at a height of 0.2245 [5.70] mm from the bottom. The component has a height above the PCB of 1.00 [25.4] mm and a height below the PCB of 1.157 [29.4] mm. The overall width of the component is 4.551 ± 0.008 [115.60 ± 0.2] mm, and the overall height is 5.00 [127] mm. A callout indicates a 'COMPONENT HEIGHT ABOVE PCB' of 1.00 [25.4] mm and a 'COMPONENT HEIGHT BELOW PCB' of 1.157 [29.4] mm. The diagram also shows a central vertical slot with a width of 0.094 [2.4] mm.

**Note:** 1. This open frame power supply should preferably be mounted horizontally on 4 metal stand-offs having diameter not more than 6 mm and height not less than 7 mm.  
2. Screws used to fix PCB on stand off should not have head diameter more than 6 mm.  
3. Washer used should not have diameter more than 6 mm

## CONNECTOR DETAILS

Ref Des	Description	Type	Pin number	Function
J1	Input AC connector	Tyco: 640445-3; Mates with 647402-3; Pin: 3-647409-1	1	AC Neutral
			2	Not connected
			3	AC Line
J2	Output DC connector ( Header type )	Tyco: 640445-8; Mates with 647402-8; Pin: 3-647409-1	1, 2, 3, 4	V1 Negative
			5, 6, 7, 8	V1 Positive
J3	Remote <b>**</b> Inhibit	Molex: 22-04-1021; Mates with 22-01-1022; Pin: 08-50-0113	1	Ext V Positive
			2	Ext V Negative
J4	Fan connector	Molex: 22-04-1021; Mates with 22-01-1022; Pin: 08-50-0113	1	V2 Positive
			2	V2 Negative
J5	Earth <b>*</b>	Molex: 19705-4301 Mates with 19003-0001	-	Earth

**Note:**

★ All the mounting holes marked with Earth symbol must be Earthed.

\*\* Power Supply output is disabled when external 5 VDC is applied

## WIRING INSTRUCTIONS

1. To prevent risk of electric shock, power supply equipment must be kept OFF while wiring.
2. Terminals and electrically charged parts must not be touched when the power is ON.
3. Wiring shall be done strictly according to the connector details.

**⚠ WARNING :** Risk of electrical shock, fire, personal injury or death.

1. Do not use the power supply without proper grounding ( Protective Earth ).
2. Do not use in wet locations or in areas where moisture or condensation can be expected.
3. Make sure mains power supply is off before wiring the power supply unit. Make sure of correct wiring. Incorrect wiring may cause electrical shock or damage.
4. Do not touch the power supply during operation or immediately after turning off because some parts get hot or are at high voltage which may cause burns or electrical shock.
5. Do not install the power supply where human body may come into contact while power is supplied to the power supply.
6. Do not repair the power supply at user end. Modification or repairing of the power supply by users may cause electrical shocks, damage & other accidents.
7. If damage or malfunction occurs during operation, immediately turn off mains power.

**MEANING OF PRODUCT SAFETY SYMBOL**



WEEE symbol for Electrical and Electronic Equipment waste management

Symbole DEEE pour la gestion des déchets d'équipements électriques et électroniques

**?** SERVICE DETAILS

This power supply is not field serviceable product. In case of failure or malfunction, send back the power supply to factory.

Please contact service center for repair on the following numbers:

Tel. No. : +91-7498077172;

Email : [service@selec.com](mailto:service@selec.com)

**NO WARRANTY ON UNIT DAMAGED DUE TO WRONG CONNECTION OF POWER SUPPLY.**

( Specifications are subject to change, since development is a continuous process. )

**Company Address :**

EL-27/1, Electronic Zone, TTC Industrial Area,  
MIDC, Mahape, Navi Mumbai - 400 710, INDIA.

Tel. No. : +91-22-28476443 / 1882

Fax No. : +91-22-28471733 | Toll free : 1800 227 353

Website: [www.selec.com](http://www.selec.com) | Email: [sales@selec.com](mailto:sales@selec.com)

**SAFETY INSTRUCTIONS**

- This manual is meant for personnel involved in wiring installation operation & routine maintenance of the equipment.
- Disconnect power supply of your system before starting any installation operation or wiring.
- Improper installation operation or wiring may impair safety & failure of the unit or electrical shock or damage.
- Connect the ground completely. A protective earthing terminal stipulated in safety standards is used. Electric shock or malfunction may occur if ground is not connected properly.