
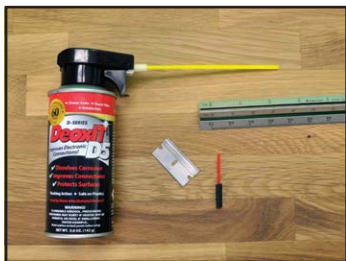


PRODUCT *Info*

DIRECTIONS: **Assembly of the** **Perfect-Straw™** **Flexible Extension,** **Part # CL-EXT-PS2**

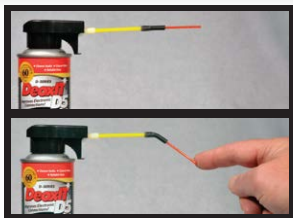

1. What you need:

- a) DeoxIT® can with Perfect-Straw™
- b) CL-EXT-PS2 Kit.
- c) Straight edge razor blade
- d) Ruler



Audio/Video



Computers



Automotive



Communications



Marine



Electrical



Energy



Photography



Security



Medical



Avionics



2. Align ruler:

- Measure 1.5" with ruler from end of Perfect-Straw™.



3. Cut Yellow Straw:

- Using the razor blade, cut 1.5" off the Perfect-Straw™.



MADE IN USA





Audio/Video



Computers



Automotive



Communications



Marine



Electrical



Energy



Photography



Security



Medical




Avionics



4. Grab the Flexible Extension:

5. Attaching:

- The rubber tube is very flexible.
- On an angle, fit the yellow tube into the hole of black tube.
- Hold the black tube close to the yellow straw and twist the black while pushing onto the yellow straw.
- Continue to hold black tube close to yellow straw while twisting until the yellow straw is close to the middle of the black tube.

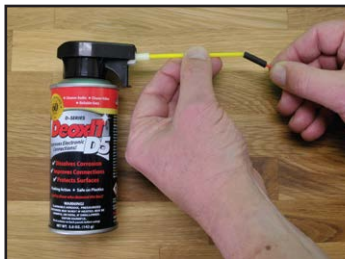

MADE IN USA



Audio/Video



Computers



Automotive



Communications



Marine



Electrical



Energy



Photography



Security



Medical



Avionics



6. Flexible Extension is Ready to Use:

- Test attachment before use.
- Face extension into a garbage can away from you.
- Spray a few times to test.



7. Tip is Flexible:

- Get into hard-to-reach areas with the Perfect-Straw™ and the Flexible Extension.



CAIG
LABORATORIES, INC.

CAIG Laboratories, Inc.
12200 Thatcher Court, Poway, CA 92064 U.S.A.
P: 858/486-8388 | E: info@caig.com
WEB: www.caig.com | www.deoxit.com

Product
Information Sheet
SB-PS17, 1/2017

Page 4